

Performer 2500 Fresnel Q6

6.7. DMX Channels

6.7.1. 3 Channels, 9 Channels, 13 Channels, 20 Channels

3 CH (Basic)	9 CH (SSP)	13 CH (TOUR)	20 CH (TR16)	Function	Value	Setting
1	1	1	1	Master Dimmer	000-255	From low to high intensity (0-100 %)
			2	Dimmer Fine	000-255	From low to high intensity (0-100 %)
	2	2	3	Red	000-255	From low to high intensity (0-100 %)
			4	Red Fine	000-255	From low to high intensity (0-100 %)
	3	3	5	Green	000-255	From low to high intensity (0-100 %)
			6	Green Fine	000-255	From low to high intensity (0-100 %)
	4	4	7	Blue	000-255	From low to high intensity (0-100 %)
			8	Blue Fine	000-255	From low to high intensity (0-100 %)
	5	5	9	Amber	000-255	From low to high intensity (0-100 %)
			10	Amber Fine	000-255	From low to high intensity (0-100 %)
	6	6	11	Lime	000-255	From low to high intensity (0-100 %)
			12	Lime Fine	000-255	From low to high intensity (0-100 %)
	7	7	13	Cyan	000-255	From low to high intensity (0-100 %)
			14	Cyan Fine	000-255	From low to high intensity (0-100 %)
					000-010	No function
					011-015	Color 1
					016-020	Color 2
					021-025	Color 3
					026-030	Color 4
					031-035	Color 5
					036-040	Color 6
					041-045	Color 7
					046-050	Color 8
					051-055	Color 9
					056-060	Color 10
					061-065	Color 11
					066-070	Color 12
					071-075	Color 13
					076-080	Color 14
					081-085	Color 15
					086-090	Color 16
					091-095	Color 17
					096-100	Color 18
					101-105	Color 19
2		8	15	Color Presets	106-110	Color 20
					111-115	Color 21
					116-120	Color 22
					121-125	Color 23
					126-130	Color 24
					131-135	Color 25
					136-140	Color 26
					141-145	Color 27
					146-150	Color 28
					151-155	Color 29
					156-160	Color 30
					161-165	Color 31
					166-170	Color 32
					171-175	Color 33
					176-180	Color 34
					181-185	Color 35
					186-190	Color 36
					191-195	Color 37
					196-200	Color 38
					201-205	Color 39
					206-210	Color 40

Performer 2500 Fresnel Q6

3 CH (Basic)	9 CH (SSP)	13 CH (TOUR)	20 CH (TR16)	Function	Value	Setting
					211–215	Color 41
					216–220	Color 42
					221–225	Color 43
					226–230	Color 44
					231–235	Color 45
					236–240	Color 46
					241–245	Color 47
					246–250	Color 48
					251–255	No function
3	9	16	CCT		000–009	No function
					010	1800 K
					025	2200 K
					040	2700 K
					055	3000 K
					070	3200 K
					085	4000 K
					100	4500 K
					115	5000 K
					130	5600 K
					145	6000 K
					160	6500 K
					175	7000 K
					190	8000 K
	205	10000 K				
	255	10000 K				
	10	17	Auto Programs		000–040	No function
				041–050	Auto 1	
				051–060	Auto 2	
				061–070	Auto 3	
				071–080	Auto 4	
				081–090	Auto 5	
				091–100	Auto 6	
				101–110	Auto 7	
				111–120	Auto 8	
				121–130	Auto 9	
				131–140	Auto 10	
				141–150	Custom program 1	Use Edit menu to manually set Time and Fade
				151–160	Custom program 2	
					161–255	No Function
	11	18	Speed		000–255	Program speed adjustment, from slow to fast
8	12	19	Strobe		000–009	No function
					010–099	Strobe, from low to high frequency (0–25 Hz)
					100–109	No function
					110–179	Lightning strobe, from low to high frequency (0–25 Hz)
					180–189	No function
					190–255	Random strobe, from low to high frequency (0–25 Hz)
9	13	20	Control Mode		000–010	No Function
					011–100	Reserved
					101–110	Dimmer Off
					111–120	Dimmer Mode 4
					121–150	Reserved
					151–160	1200 Hz
					161–170	2400 Hz
					171–180	4000 Hz
					181–190	6000 Hz
					191–200	25000 Hz
	201–210	All Reset				
	211–255	Reserved				

Note: Make sure that the Master Dimmer channel is open in order to see the light output.